
## 1.Surface Mounted with J-box

1.Loosen the screw on side of the light, removing the bracket from Canopy light by pulling it out slightly, just leaving the ring on bracket. 2.Fix the bracket on J-box, and put the wire through the central hole for wiring.

3.Attach the Canopy light with bracket by putting the ring on clips again.Connect the Black wire for Line,White for Neutral, Yellow Green for Ground.

4.Slide the Canopy lights into bracket, and secure the screw on side of the light to prevent the light from sliding out from the bracket Installation done.

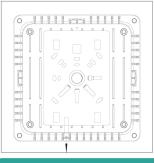










## 2.Pendent with 3/4 inch Conduit

1.Loosen the screw on side of the light, removing the bracket from Canopy light by pulling it slightly out , just leaving the ring on bracket.(See the Step 1 above)

 Connect the wires threaded from conduit and Canopy, Black wire for Line, White for Neutral, Yellow Green for Ground. 3. Screw the Conduit into the hole on top of Canopy light, Installation done.

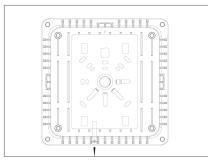

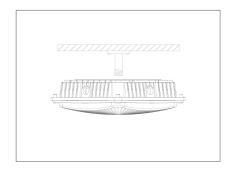

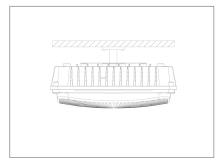

## 3. Surface mount

1.Remove the lens and metal plate by unscrewing the screws.

2.Fixture is best mounted by drilling through back of fixture securing it to the mounting surface using the appopriate mouting hardware for the surface.Mounting hardware suoolied by others.Whendrilling holes do not drill within 1/4"(6mm)
All unused holes must be plugged.Waterproof silicone will ensure a tight seal.

3.Replace the mental plate and the lens, make sure no wires are pinched when replacing parts.

